

SPECIFICATION:



JOSAM 12000-CR-TB TEST BRACKET USED TO SECURE ABS EXTENSION TO FACEPLATE DURING PRESSURE TESTING. MADE OF STEEL AND PAINTED JOSAM GREEN COLOR.

CLOSET CARRIER

COMPRESSION RING TEST BRACKET


SERIES **12000-CR-TB**

FITTING NOT SHOWN

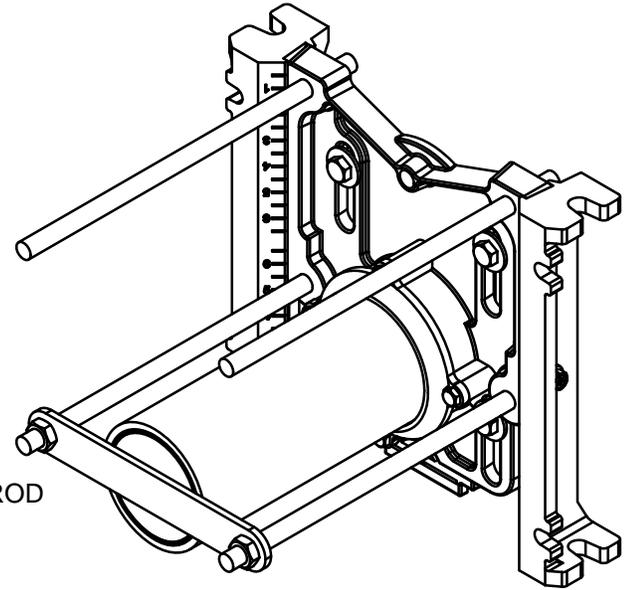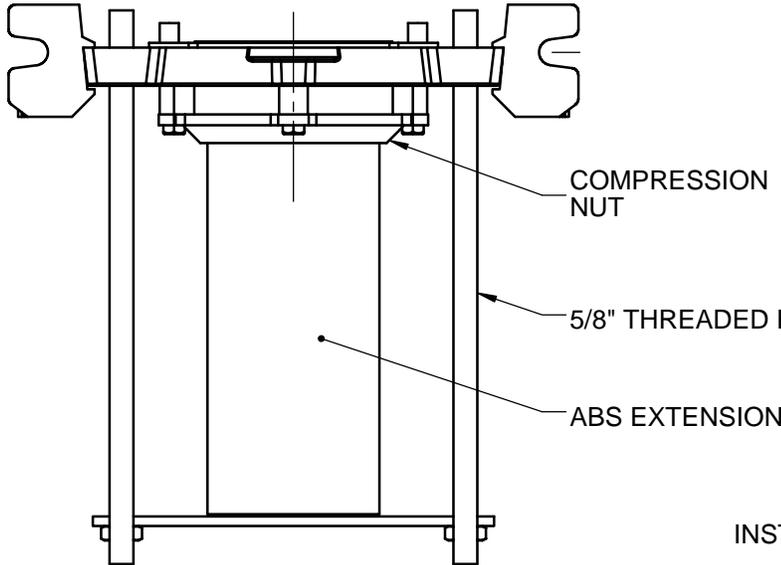

INSTRUCTIONS:

1. INSERT EXTENSION INTO FACEPLATE TO REQUIRED DEPTH
2. TIGHTEN FOUR BOLTS TO SECURE COMPRESSION NUT
3. INSTALL TEST BRACKET ON TWO LOWER 5/8" THREADED RODS
4. THREAD TWO 5/8" HEX NUTS ONTO TWO LOWER THREADED RODS AND HAND TIGHTEN TO BRACKET
5. PRESSURE TEST
6. REMOVE TWO HEX NUTS AND TEST BRACKET AND CONTINUE WITH CARRIER INSTALLATION

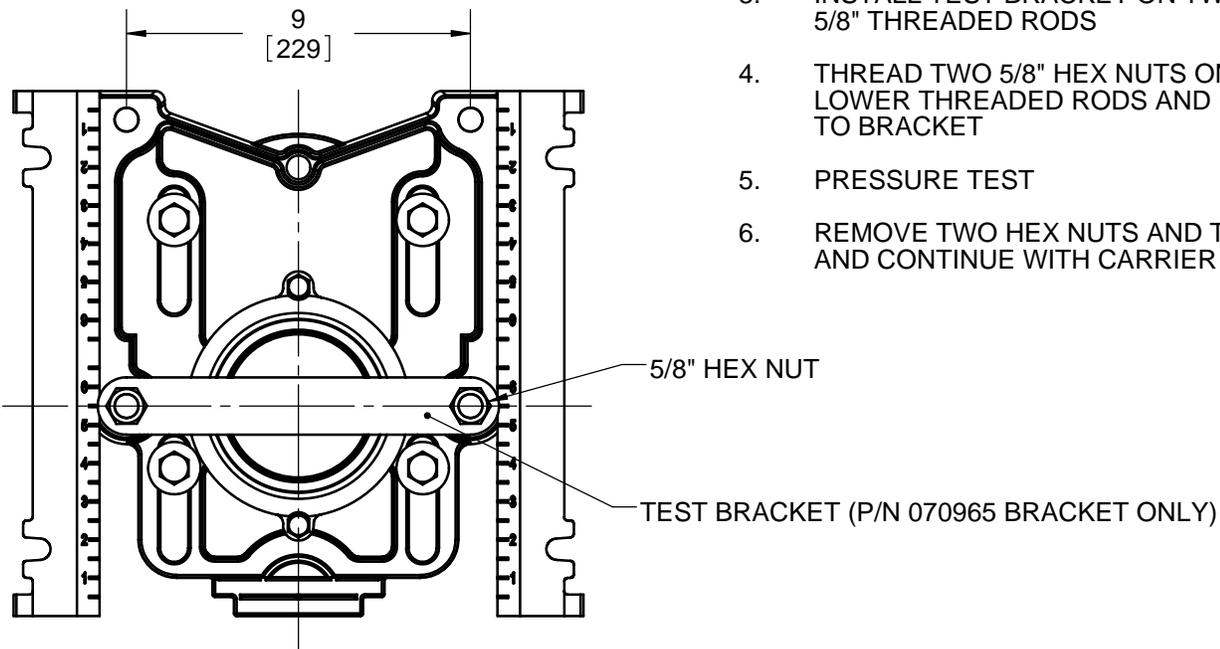

DATE OF LAST CHANGE: 7/08/16

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCES AND CHANGE WITHOUT NOTICE. WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA.

JOSAM COMPANY
MICHIGAN CITY, INDIANA

NOTES